



# INSTALLATION, OPERATION & MAINTENANCE MANUAL

## Plasma Air PA600 Series

REV 12/2019



[www.plasma-air.com](http://www.plasma-air.com)



# INTRODUCTION

The Plasma Air PA600 is a needlepoint brush type ionizer producing an equal amount of positive and negative ions. This ionization equipment is effective in reducing harmful pollutants and odors by introducing positive and negative ions into the system airflow. This unit is highly versatile as it may be installed in an air handling unit, fan coil unit, PTAC, heat pump and even a ductless split system. The PA600 is self contained in a potted enclosure which has molded flanges with mounting holes. Models are available to accept 12V DC, 24V AC, 120V AC and 208 - 240V AC without the use of an external power supply.

# MECHANICAL INSTALLATION INSTRUCTIONS

## GENERAL MOUNTING CRITERIA:


1. Do not connect to power before mechanical installation is complete.
2. Mount ionization unit to allow access for general maintenance.
3. Mount the unit at or near the fan inlet using the holes in the mounting flanges, ensuring that the air stream flows over the 2 brushes simultaneously. See figures 1 & 2.
4. The unit should be mounted downstream of the filter.
5. For best results avoid locations directly after a cooling coil or humidifier.

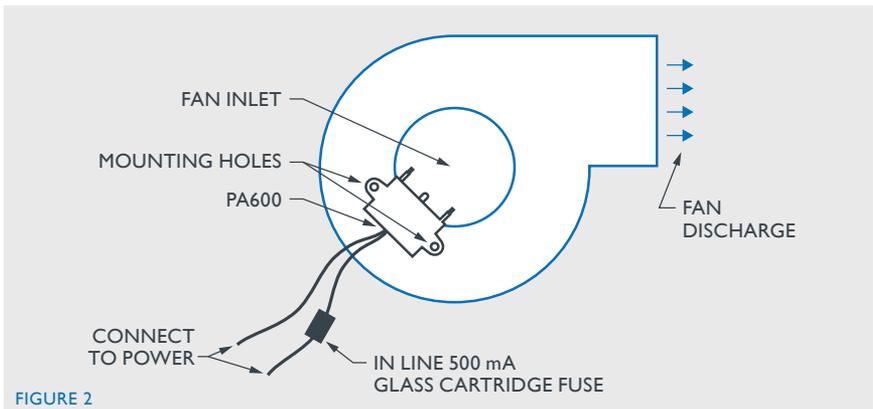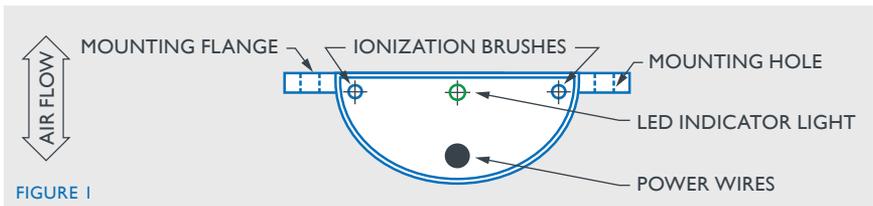

# ELECTRICAL INSTALLATION INSTRUCTIONS

**WARNING:** Do not connect to power before installation is complete. Always disconnect power to the ionizer before handling.

1. All field wiring to be in accordance with NEC and Authorities Having Jurisdiction (AHJ).
2. Connect power to the ionizer using appropriate voltage per the following:  
601 (12V DC) 602 (24V AC) 603 (120V AC) 604 (208-240V AC)  
See figure 3.
3. For 120V AC and 230V AC models the installer shall provide a grounding method per the local AHJ.
4. For best results interlock ionizer with fan power.
5. Apply power to unit. Confirm that green indicator light illuminates indicating that the ionizer is functioning properly.

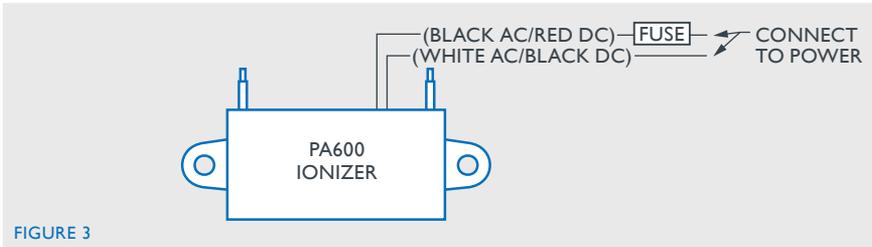

## OPERATION

1. When power is supplied to the ionizer, the ionizer will be activated and the green ion indicator light will illuminate.
2. The ionization unit is self balancing and does not require any type of adjustment.

## TROUBLESHOOTING

If the unit is not working, check the following:

1. The supply fan is running and that the green light illuminates.
2. Check the power input connections to the ionization unit. Verify all connections are correct and tightened. Reconnect any loose wires as necessary.

## SEQUENCE OF OPERATION

1. For units that are interlocked with the supply fan control, the BAS controls the start/stop of the air conditioning unit supply fan.

CE



---

PLASMA AIR  
35 MELROSE PLACE  
STAMFORD, CT 06902

phone 203-662-0800  
fax 203-662-0808  
info@plasma-air.com

---

[www.plasma-air.com](http://www.plasma-air.com)

©2020 All rights reserved.  
PA-US-IOM-005